



Recycling bin lid assembly instructions


1. Remove tape on each side beginning with the two ends as shown.



5. Remove the tape from the side flaps.



2. Bend inside flaps aligning with the inside edge of the groove.

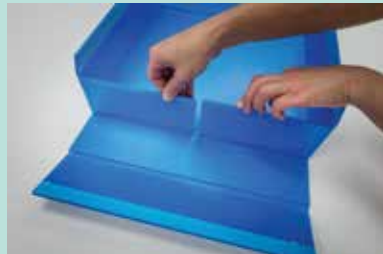

6. Bend the flaps towards the middle of the box top.



3. Bend the flap towards the inside of the box top.



7. Press the side flaps carefully and repeat at the other edge of the box top.



4. Press the flap carefully to make contact with the side of the flap around the corners. Repeat at the opposite side.



8. Assembly complete.

